
INSTRUCCIONES DE MONTAJE / ASSEMBLY INSTRUCTIONS

MD 9006	MD 9026
500x400x180 ABS PANO	500x400x180 PC PANO
500x400x180 ABS BOARD	500x400x180 PC BOARD


KINGBOX

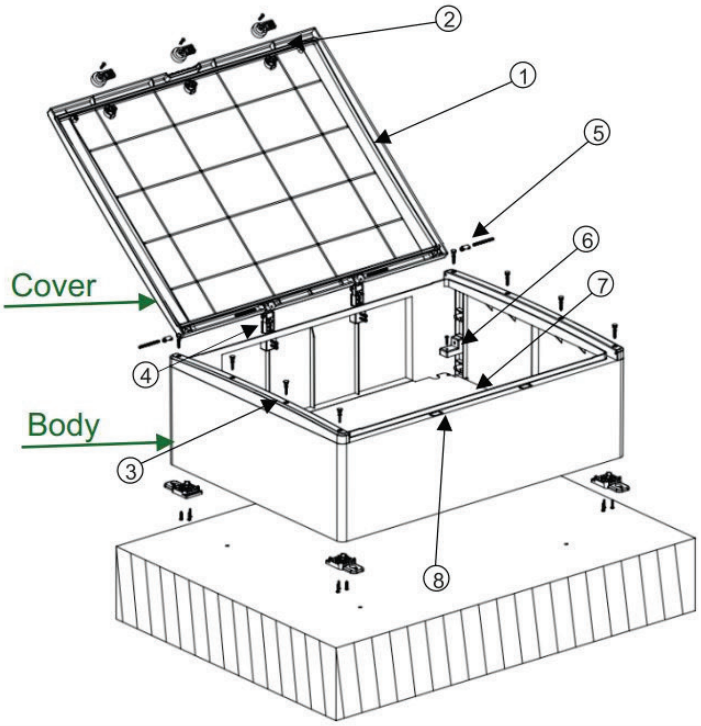


1. Proceso de junta para cubrir
2. Instalacióm de lengueta de bloqueo y perno de bloqueo
3. Instalación de mlduras laterales y tapones laterales
4. Colocaión de bisagras en ranuras
5. Instalación de casquillo del pasador y montaje de pasador
6. Ajuste de salvamenteles a la altura deseada (3 etapas)
7. Atornillado de la sábana al salvamenteles
8. Cierre el espacio existente con la cubierta de la bisagra paracambiar la dirección de la puerta
9. Montajede pared mediante soportes de montaje cuadrados

1. Gasket process to cover
2. Lock anchor and lock bolt mounting
3. Side moulding and stopper mounting
4. Hinge mounting
5. Pin bushing and Pin mounting
6. Adjusting the trivet of plate apparatus to the desired height
7. Screwing the plate onto the trivet of plate
8. Occluding the gap, which serves to change the direction of the cover
9. Mounting to wall via mounting kit apparatus

CUERPO

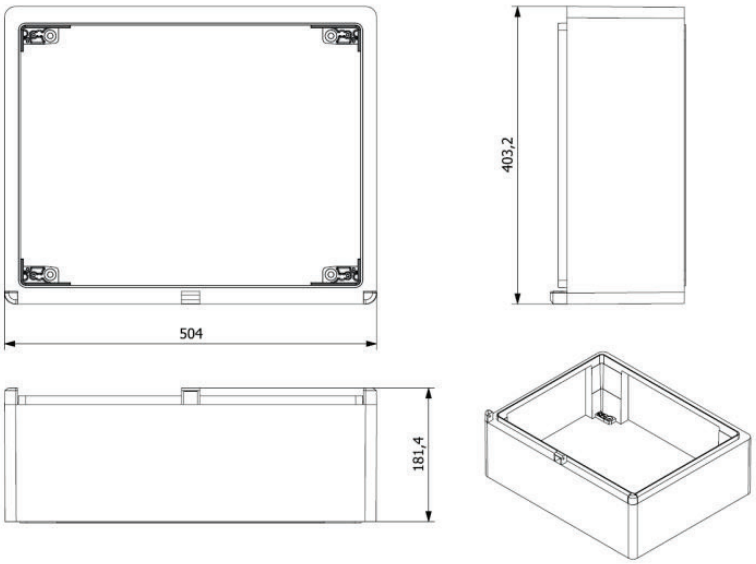

COBERTURA

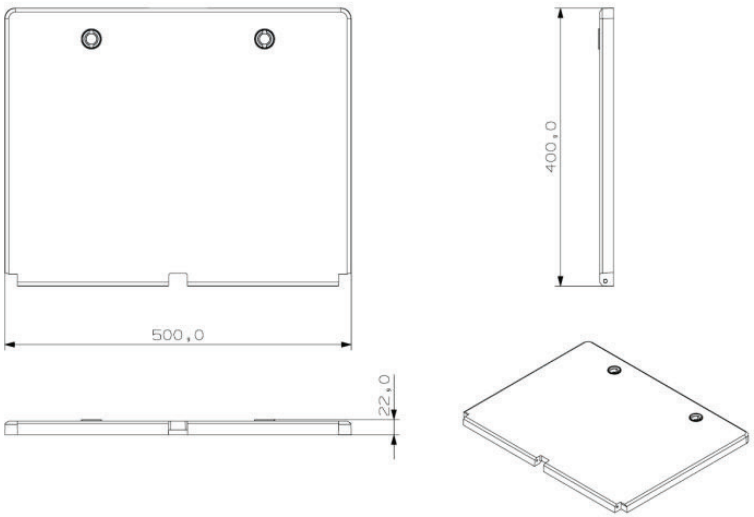

HF Halogen FREE

RoHS